

750CB, 753CB and 756CB Dip-switch remote controls are compatible with the following Garage Door Opener models:

The following models have dip-switches on the receiver logic board.

| | | | | | |
|-------|-------|-------|-------|-------|-------|
| 140 | 150 | 240 | 350 | 450 | 550 |
| 140-6 | 150-6 | 240-6 | 350-6 | 450-6 | 550-6 |

The following units have Grey, White or Yellow learn

| | | | | | | | | |
|-------|-------|-------|--------|--------|------|--------|--------|--------|
| 140-9 | 240-9 | 450-9 | 1000 | 2000 | 3000 | 4000-4 | 5000 | 701WHC |
| 150-9 | 350-9 | 550-9 | 1000-4 | 2000-4 | 4000 | 4001 | 5000-4 | 700WHC |


The following models have a green learn button.

| | | | | | | | |
|------|------|--------|---------|------|-------|--------|--------|
| 1100 | 3000 | 4600 | 4600-2K | 7200 | 8100M | 9602 | 711WHC |
| 2100 | 4100 | 4600-2 | 5100 | 8100 | 9601 | 710WHC | |

Programming 750CB dip switch remote control


1

Open your existing remote control and locate the dip switches.

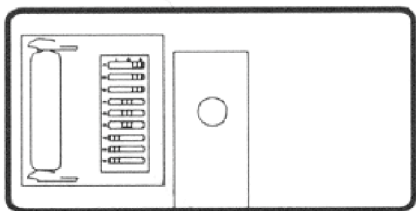


2

Change the setting of these switches to any random position.

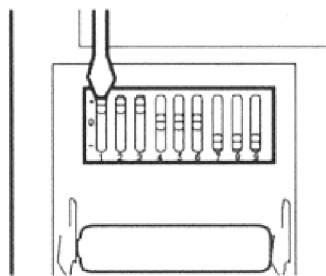

3

Locate the yellow, white, grey, or green LEARN BUTTON on the back panel of the overhead motor unit.

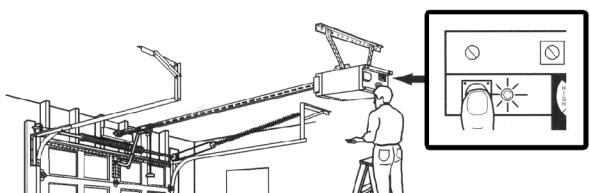

4

Hold the button on the remote control. Push and release the LEARN BUTTON. Let go of the remote control button. The receiver has accepted the new code.

